

HASZNÁLATI UTASÍTÁS

Vezeték nélküli csengő (KINETIC kapcsoló, elem nem szükséges)




Megjegyzés: Kérjük, olvassa el figyelmesen ezt a kézikönyvet a termék használata előtt, és telepítse és használja a terméket az utasításoknak megfelelően.

Termékleírás:

1. A termék jellemzői: Elem nélküli vezeték nélküli csengő. Nincs szükség elemekre. Nincs kábelezés, egyszerű telepítés.

2. Termékjellemzők:

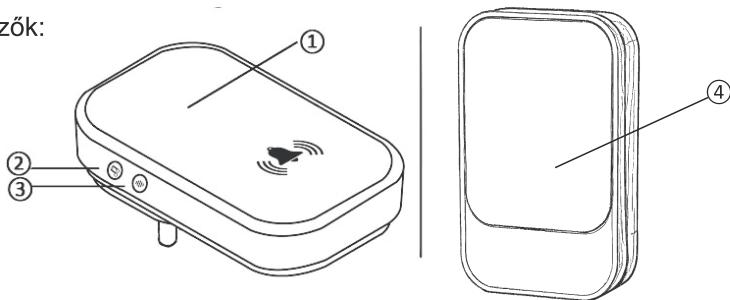

1. Jeladó 2. Párosító gomb / Dallamválasztó gomb
3. Hangerő gomb 4. Adó gomb (csengő nyomógomb)


Műszaki paraméterek

Műszaki paraméter	Csengő adó	Csengő vevő
Tápegység	Saját meghajtású energiatermelés	AC100V-230V 50 / 60Hz
Energiafogyasztás	-	0,25 W
Zene	-	38 dallam
Súly	38g	51g
Az átvitel távolsága	(Nincs akadály)> 100M	(Nincs akadály)> 100M
Működési frekvencia	433MHZ	433MHZ
Méret	72x42x18mm	90x55x22mm
Csengő hangereje	-	> 50dB/1m
Üzemi hőmérséklet	-20°C/ +60°C	-10°C/ +45°C


Felhasználói utasítás

1. Párosítás: Nyomja meg a vevőegység dallamgombját körülbelül 3 másodpercig. Miután a vevőegység lejátszott egy dallamot, 3 másodpercen belül nyomja meg az egyik adóegység gombját. A vevőegység ismét hangjelzést ad, jelezve, hogy a párosítás befejeződött. Egyszerre csak egy adóegység párosítható. Ismételje meg a fenti lépéseket további adóegységek párosításához.

2. 2. Párosítás törlése: Ahogy a képen látható, nyomja meg a vevőegység dallamgombját körülbelül 10 másodpercig. Amikor a vevőegység kétszer lejátszsa a dallamot, az összes adóegység sikeresen törölve van.

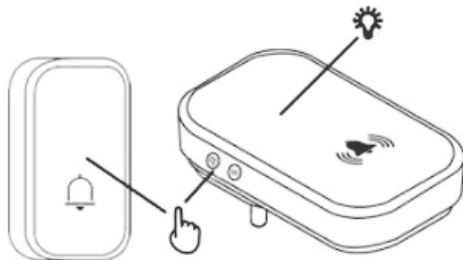

3. Csengőhang kiválasztása: Amikor a vevő be van kapcsolva, nyomja meg a hangjelző gombot a hangjelzés megváltoztatásához a beépített 38 csengőhang között.

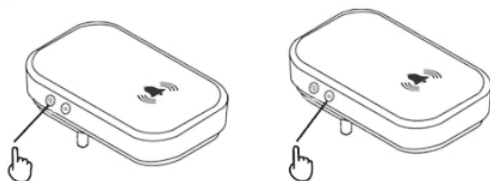

4. Hangerőszabályzó: Amikor a vevő be van kapcsolva, nyomja meg a hangerő gombot a hangerő megváltoztatásához nagy, közepes és kis hangerő.

Adó telepítése: A jeladó elhelyezhető vagy mozgatható a falon, vagy rögzíthető a kedvenc pozíciójába. A. 1. módszer (kétoldalas matricák): Az ábra szerint: ragassza a kétoldalas matricák egyik oldalát az adó aljára, majd ragassza fel az adót bárhová, ahová csak szeretné.

Tipp: Kérjük, kerülje a fémtárgyakra (vaskapukra stb.) történő felszerelést az érzékelési távolság befolyásolásának elkerülése érdekében. Kérjük, próbálja ki felhelyezés előtt.



Problémák megoldása:

1. Nincs hang: Ellenőrizze, hogy a vevőegység megfelelően van-e csatlakoztatva, győződjön meg arról, hogy a vevő be van kapcsolva.
2. Ellenőrizze, hogy a párosítás sikeres-e, próbálja meg törölni a párosítást, majd próbálja meg újra párosítani.
3. Rövid átviteli távolság: A fémtárgyak, például a vasajtók és a vaskeretek befolyásolják a tényleges átviteli távolságot. Ne helyezze az adót és a vevőt fémtárgyak közelébe. A falak és a mennyezet szintén befolyásolja az átviteli távolságot. Interferencia léphet fel, amennyiben más vezeték nélküli eszközökhöz közel telepíti stb.

MANUAL INSTRUCTION

Kinetic battery free wireless doorbell



Note: Please read this manual carefully before using the product, and install and use the product according to the instructions.

Product Description:


1. Product Features: Battery-free wireless doorbell.

Generating power by pressing to drive wireless signals.No batteries needed. No

Wiring, Simple installation.

Green and Eco-friendly.

2. Product diagram:

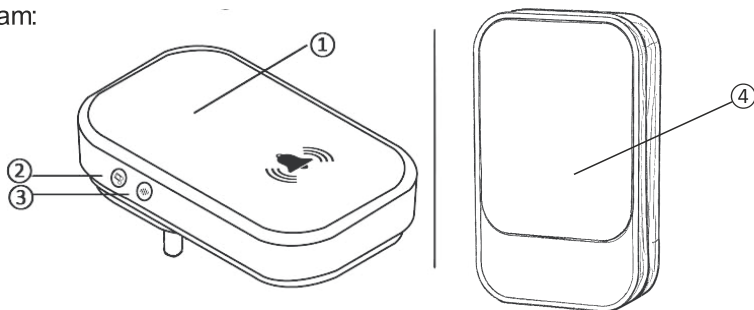

1. Indicator

2. Paring button and chime selection button

3. Volume button

4. Transmitter button


Technical parameter:

Technical parameter	Doorbell transmitter	Doorbell receiver
Power supply	self-powered generation	AC100V-230V 50/60Hz
Power consumption	-	0.25W
Music	-	38 Melodies
Weight	38g	51g
Distance of transmission	(No obstacles)> 100M	(No obstacles)> 100M
Working frequency	433MHZ	433MHZ
Appearance dimension	72x42x18mm	90x55x22mm
Ringtone volume	-	> 50dB/1m
Working temperature	-20°C/ +60°C	-10°C/ +45°C


User Instruction

1. Paring: Press the melody button on the receiver for about 3 seconds. Once the receiver plays a melody, press one transmitter within 3 seconds. The receiver will sound again, indicating pairing is completed. Only one transmitter can be paired at a time. Repeat the above steps to pair additional transmitters.

2. Clear the pairing: As shown in the picture, press the melody button on the receiver for about 10 seconds. When the receiver plays the melody twice, all transmitters are successfully cleared.

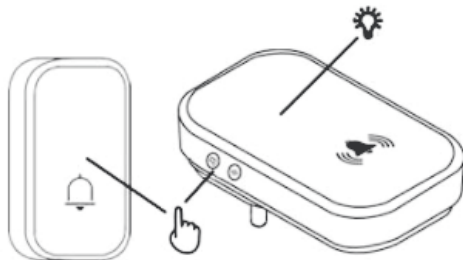


3. Chime selection: When the receiver is powered on, press the chime selection button to change the chime among the built-in 38 chimes.

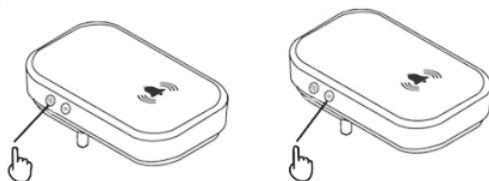

4. Volume Control: When the receiver is powered on, press volume button to change the volume between large, medium, and low volume.

Transmitter Installation: The transmitter can be placed or moved at wall, or it can be fixed in your favorite position. A. Method 1 (double-sided stickers): As shown: stick one side of the double sided stickers to the bottom of the transmitter, then stick the transmitter anywhere you like.

Tip: Please avoid installing on metal objects (iron gates, etc.) to avoid affecting the launch distance. Please try it before fixed transmitter.

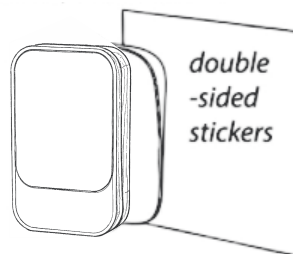

FAQ: 1.No sound: Check whether the receiver is plugged well,make sure the receiver is powered on.

2. Check whether the pairing is successful, try clearing the pairing and then re-pairing again.

3. Short transmission distance: Metal objects such as iron doors and iron frames will affect the effective transmission distance.

Avoid placing the transmitter and receiver near metal objects.

Walls and ceilings also affect the transmission distance.

Interference from other wireless devices, etc.