

HASZNÁLATI UTASÍTÁS

Vezeték nélküli csengő (Elem nélküli, KINETIC kapcsoló)



Megjegyzés: Kérjük, olvassa el figyelmesen ezt a kézikönyvet a termék használata előtt, és telepítse használja a terméket az utasításoknak megfelelően.


Termékleírás:

1. Termékjellemzők:

Elem- és vezeték nélküli csengő. Egyszerű telepítés.

2. Termékdiagram:

WBKK02-1A1VB - W

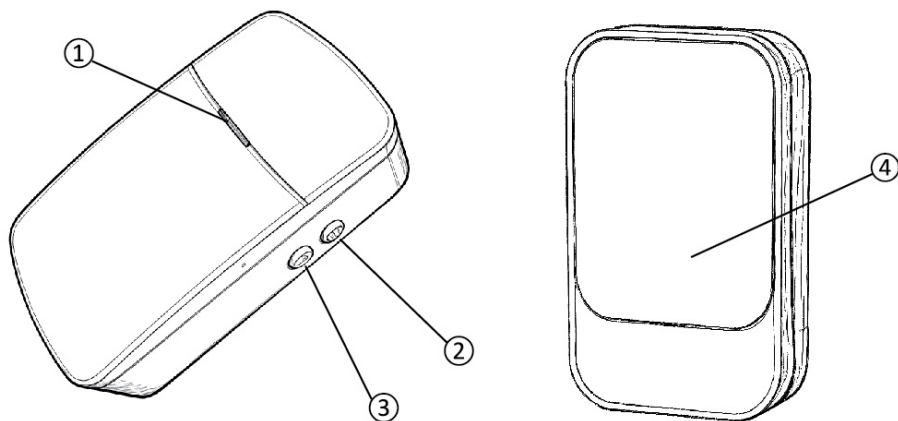

(1) Működést jelző fény

(3) Párosító gomb

(2) Hangerő gomb

(4) Csengő nyomógomb
(adó gomb)

3. Műszaki paraméter:


Műszaki paraméter	Csengő adó	Csengő vevő
Tápegység	Saját meghajtású energiatermelés	AC100V-230V 50 / 60Hz
Energiafogyasztás		0,25 W
Zene		38 dallam
Súly	38g	54-59g
Az átvitel távolsága	Működési tartomány (nincs akadály-nyílt terepen)> 100M	
Működési gyakoriság	433MHZ	
Méret	72x42x18mm	95x53x49-70mm
Csengőhangerő		>50dB/1m
Üzemi hőmérséklet	-20°C~+60°C	-10°C~+45C


Felhasználói utasítás

1. Párosítás: Nyomja meg a vevőegység dallam gombját körülbelül 3 másodpercig. Miután a vevőegység lejátszott egy dallamot, 3 másodpercen belül nyomja meg az egyik adóegység gombját. A vevőegység ismét hangjelzést ad, jelezve, hogy a párosítás befejeződött. Egyszerre csak egy adóegység párosítható. Ismétlje meg a fenti lépéseket további adóegységek párosításához.

2. Párosítás törlése: 1 percen belül a vevőegység bekapcsolása után, nyomja meg és tartsa lenyomva a párosítás gombot, amíg a lámpa 3 villanást nem mutat az összes párosítás törléséhez.

Ezután nyomja meg újra bármelyik gombot és a fény kialszik, jelezve, hogy az törlés befejezett.


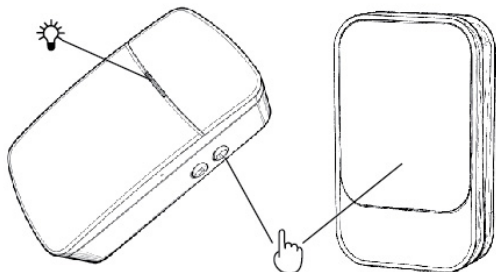


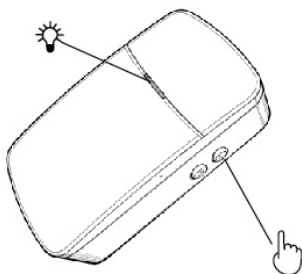

Vissza az első csengőhanghoz: A vevőkészülék bekapcsolása után, nyomja meg és tartsa lenyomva a hangerőgombot az első csengőhanghoz való visszatéréshez.

4. Csengőhang kiválasztása: Amikor a vevőegység be van kapcsolva, nyomja meg a hangjelzés kiválasztó gombot a hangjelzés megváltoztatásához a beépített 38 hangjelzés között.


5. Hangerőszabályzó: Amikor a vevőegység be van kapcsolva, nyomja meg a hangerő gombot a nagy, közepes és alacsony hangerő közötti váltáshoz.

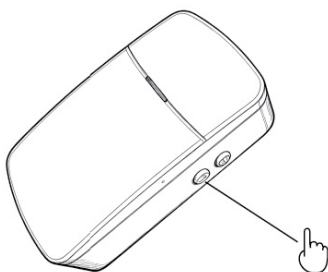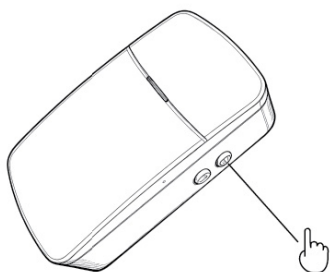

Adó telepítése:


Rögzítés kétoldalas ragasztóval

Tetszés szerint elhelyezhető vagy mozgatható, vagy rögzíthető kedvenc helyzetében kétoldalas matricával: Az ábra szerint: ragassza a kétoldalas matricák egyik oldalát az adó aljára, majd ragassza fel az adóegységet bárhová, ahová csak szeretné.

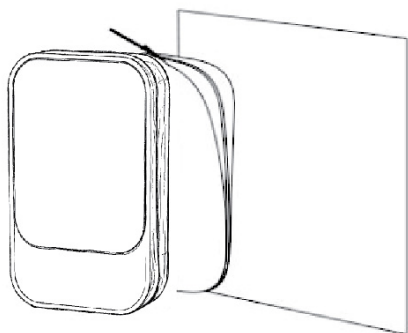

Csavaros rögzítés

Helyezze a konzollemeszt a kívánt helyzetbe, és rajzolja be a fúrási pontot. Használjon professzionális szerszámokat a lyukak fúrásához a falon, és használjon tipliket, hogy csavarokkal rögzítse a konzollemeszt a falhoz, majd csúsztassa az adót a helyére.

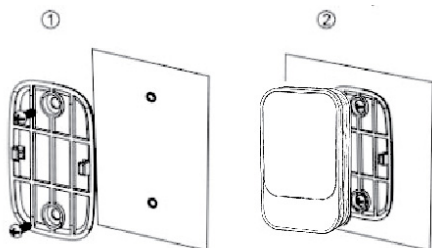

Megjegyzés:

Ne telepítse fémtárgyak, például a vasajtók és a vaskeretek befolyásolják a tényleges átviteli távolságot.

Ne helyezze az adót és a vevőt fémtárgyak közelébe.

A falak és a mennyezet is befolyásolja az átviteli távolságot.

Interferencia léphet fel, más vezeték nélküli eszközöktől stb.

Ha nincs hang

1. Ellenőrizze, hogy a vevőegység jól van-e csatlakoztatva, győződjön meg, hogy a vevőegység be van-e kapcsolva.
2. Ellenőrizze, hogy a párosítás sikeres-e, próbálja meg törölni a párosítást, majd próbálja meg újra párosítani.

MANUAL INSTRUCTION

Kinetic battery free wireless doorbell



001 Self powered wireless doorbell

Note: Please read this manual carefully before using the product, and install and use the product according to the instructions.


Product Description:

1. Product Features :

Battery-free wireless doorbell. Generating power by pressing to drive wireless signals. No batteries needed. No Wiring. Simple installation. Green and Eco-friendly.

2. Product diagram:

WBKK02-1A1VB - W

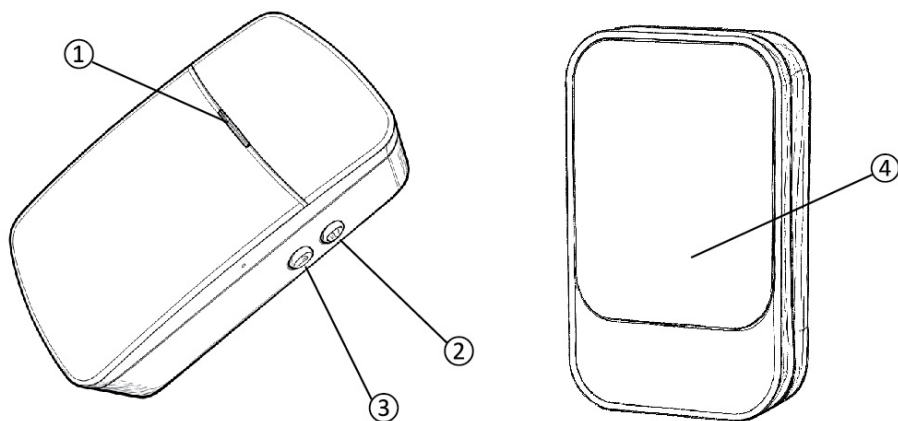

① Indicator

③ Pairable button and music selection button

② Volume button

④ Transmitter button

3. Technical parameter:


001 Technical parameter

Technical parameter	Doorbell transmitter	Doorbell receiver
Power supply	self-powered generation	AC100V-230V 50/60Hz
Power consumption		0.25W
Music		38 Melodies
Weight	38g	54-59g
Distance of transmission	Operating range(No obstacles)> 100M	
Working frequency	433MHZ	
Appearance dimension	L72mmxW42mmxH18mm	L95mmxW53mmxH49-70mm
Ringtone volume		>50dB/1m
Working temperature	-20°C~+60°C	-10°C~+45°C



User Instruction

1 .Paring: Press the melody button on the receiver for about 3 seconds. Once the receiver plays a melody, press one transmitter within 3 seconds. The receiver will sound again, indicating pairing is completed. Only one transmitter can be paired at a time. Repeat the above steps to pair additional transmitters.

2. Clear the pairing: As shown in the picture, press the melody button on the receiver for about 10 seconds. When the receiver plays the melody twice, all transmitters are successfully cleared.

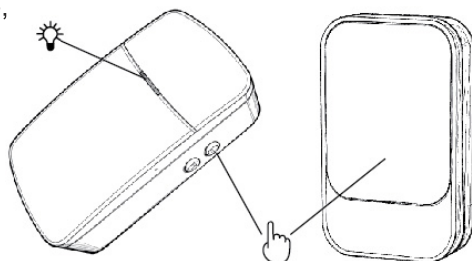

3. Chime selection: When the receiver is powered on, press the chime selection button to change the chime among the built-in 38 chimes.
4. Volume Control: When the receiver is powered on, press volume button to change the volume between large, medium, and low volume.

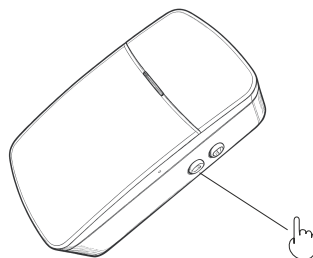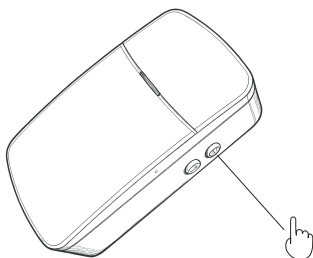


transmitter Installation :

The 001FS transmitter can be placed or moved at will, or it can be fixed in your favorite position.

1. Method 1 (double-sided stickers): As shown: stick one side of the double-sided stickers to the bottom of the transmitter, then stick the transmitter anywhere you like.

double-sided stickers

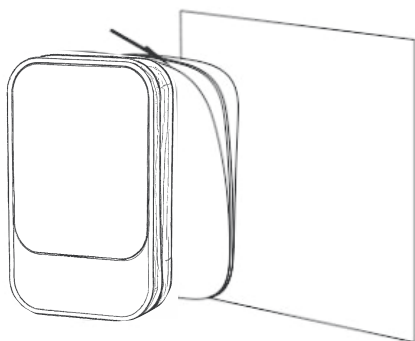

Tip: Please avoid installing on metal objects (iron gates, iron windows, etc.) to avoid affecting the launch distance. Please try it before fixed transmitter.

optional accessories

2. Method 2 (screw):

Put the bracket plate in the desired position and draw the anchor point. Use professional tools to punch holes on the wall and install rubber plugs to fix the bracket plate to the wall with screws, and then slide the transmitter in place.

FAQ:

- 1.No sound:Check whether the receiver is plugged well, make sure the receiver is powered on.
- 2.Check whether the pairing is successful, try clearing the pairing and then re-pairing again.

3. Short transmission distance : Metal objects such as iron doors and iron frames will affect the effective transmission distance. Avoid placing the transmitter and receiver near metal objects. Walls and ceilings also affect the transmission distance . Interference from other wireless devices, etc.